



Tools Dead-blow hammer
5/32" Allen wrench


People 1 Person
Time 10 - 15 minutes

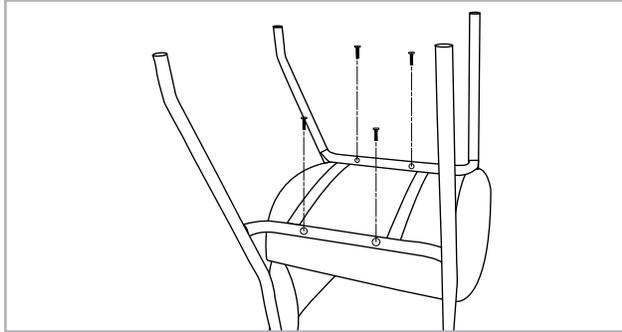


Seat Install
Install 4 screws to secure seat to frame.

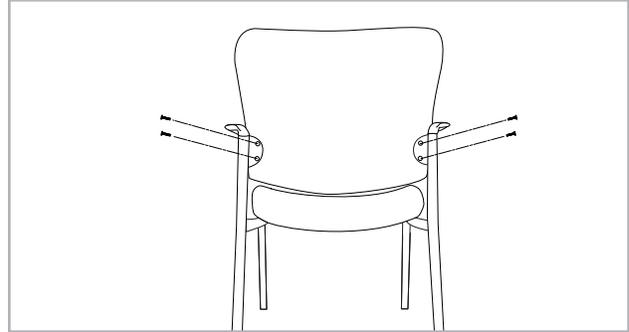

Back Install
Install 4 screws to secure backrest to frame.

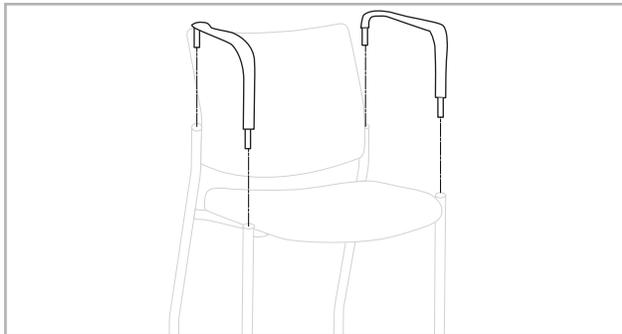

Arm Install
Place one arm at a time into frame. Strike arms with hammer at each hole, to secure insert.

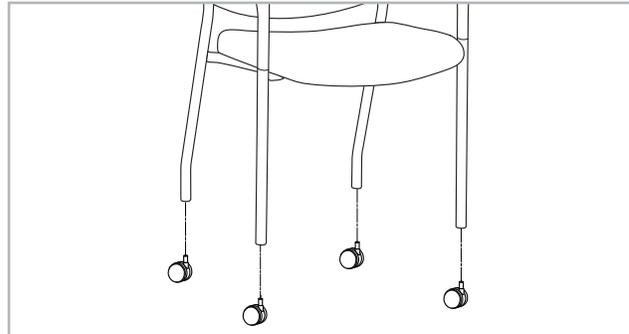

Caster Install
Firmly press casters into frame.